

TORQUE SPECIFICATIONS

	56G	56B and 56H	56J
BRAKES			
Backing plate bolt nut			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	35 - 40 ft-lbs (4,8 - 5,5 kg-m)	35 - 40 ft-lb (4,8 - 5,5 kg-m)	35 - 40 ft-lb (4,8 - 5,5 kg-m)
CLUTCH			
Pressure plate cover-to-flywheel screw			
—size and thread.....	5/16" - 18	3/8" - 16	3/8" - 16
—torque required.....	13 - 15 ft-lb (1,8 - 2,1 kg-m)	28 - 32 ft-lb (3,9 - 4,4 kg-m)	25 - 28 ft-lb (3,5 - 3,9 kg-m)
Housing-to-cylinder block screw			
—size and thread.....	3/8" - 16	3/8" - 16	3/8" - 16
—torque required.....	28 - 32 ft-lb (3,9 - 4,4 kg-m)	28 - 32 ft-lb (3,9 - 4,4 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Housing-to-engine plate bolt nut			
—size and thread.....	5/16" - 24		
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)		
Housing-to-engine plate dowel bolt nut			
—size and thread.....	3/8" - 24		
—torque required.....	28 - 32 ft-lb (3,9 - 4,4 kg-m)		
COOLING			
Fan-to-water pump hub screw			
—size and thread.....	5/16" - 18	5/16" - 18	1/4" - 28
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	90 - 100 in-lb (1,04 - 1,13 kg-m)
Water outlet-to-water manifold screws			
—size and thread.....	5/16" - 18	5/16" - 18	3/8" - 16
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Water pump-to-manifold screw			
—size and thread.....		5/16" - 18	5/16" - 18
—torque required.....		13 - 17 ft-lb (1,8 - 2,3 kg-m)	15 - 18 ft-lb (2,1 - 2,5 kg-m)
Water pump-to-block screws			
—size and thread.....	5/16" - 18		
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)		
ENGINE			
Camshaft gear screw			
—size and thread.....	3/8" - 24	3/8" - 24	
—torque required.....	20 - 22 ft-lb (2,8 - 3,0 kg-m)	20 - 22 ft-lb (2,8 - 3,0 kg-m)	
Camshaft thrust plate fastening screws			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	15 - 18 ft-lb (2,1 - 2,5 kg-m)
Connecting rod cap bolt nut			
—size and thread.....	11/32" - 24	3/8" - 24	3/8" - 24
—torque required.....	28 - 32 ft-lb (3,9 - 4,4 kg-m)	52 - 54 ft-lb (7,2 - 7,5 kg-m)	40 - 45 ft-lb (5,5 - 6,9 kg-m)
Crankshaft main bearing cap screw			
—size and thread.....	1/2" - 13	1/2" - 13	1/2" - 13
—torque required.....	85 - 95 ft-lb (11,7 - 13,1 kg-m)	85 - 95 ft-lb (11,7 - 13,1 kg-m)	90 - 95 ft-lb (12,4 - 13,1 kg-m)
Crankshaft vibration damper screw			
—size and thread.....	11/16" - 16	11/16" - 16	3/4" - 16
—torque required.....	130 - 140 ft-lb (18,0 - 19,4 kg-m)	130 - 140 ft-lb (18,0 - 19,4 kg-m)	130 - 150 ft-lb (18,0 - 20,7 kg-m)
Cylinder head screw			
—size and thread.....	7/16" - 14	7/16" - 14	7/16" - 14
—torque required.....	46 - 50 ft-lb (6,4 - 6,9 kg-m)	55 - 65 ft-lb (7,6 - 9,0 kg-m)	55 - 60 ft-lb (7,6 - 8,3 kg-m)
Engine front plate screw			
—size and thread.....	5/16" - 18		
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)		
Engine rear plate screw			
—size and thread.....	3/8" - 16		
—torque required.....	28 - 32 ft-lb (3,9 - 4,4 kg-m)		
Exhaust pipe-to-exhaust manifold stud nut or screw			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	26 - 30 ft-lb (3,6 - 4,1 kg-m)	26 - 30 ft-lb (3,6 - 4,1 kg-m)	18 - 20 ft-lb (2,5 - 2,8 kg-m)

	56G	56B and 56H	56J
Flywheel-to-crankshaft bolt nut			
—size and thread.....	3/8" - 24	3/8" - 24	7/16" - 20
—torque required.....	33 - 35 ft-lb (4,6 - 4,8 kg-m)	33 - 35 ft-lb (4,6 - 4,8 kg-m)	55 - 60 ft-lb (7,6 - 8,3 kg-m)
Fuel pump eccentric retainer bolt			
—size and thread.....			3/8" - 16
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Inlet manifold-to-block screw			
—size and thread.....		3/8" - 16	3/8" - 16
—torque required.....		26 - 30 ft-lb (3,6 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Exhaust manifold-to-block stud nut			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 16
—torque required.....	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Oil filler pipe screws			
—size and thread.....			
—torque required.....		5/16" - 18 13 - 17 ft-lb (1,8 - 2,3 kg-m)	
Oil filter cover screw			
—size and thread.....	7/16" - 20	7/16" - 20	7/16" - 20
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)
Oil pan drain plug			
—size and thread.....	3/4" - 16	3/4" - 16	5/8" - 18
—torque required.....	22 - 25 ft-lb (3,1 - 3,5 kg-m)	22 - 25 ft-lb (3,1 - 3,5 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Oil pan screw			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	15 - 18 ft-lb (2,1 - 2,5 kg-m)
Oil pump retaining screw or nut			
—size and thread.....	5/16" - 18	5/16" - 24	
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	
Piston pin lock screw nut			
—size and thread.....	3/8" - 24	3/8" - 24	
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	
Rocker arm cover nuts ¹			
—size and thread.....		5/16" - 20	5/16" - 18
—torque required.....		8 - 10 in-lb (0,09 - 0,12 kg-m)	25 - 30 in-lb (0,28 - 0,34 kg-m)
Rocker arm support bracket screw			
—size and thread.....		5/16" - 18	
—torque required.....		13 - 17 ft-lb (1,8 - 2,3 kg-m)	
Spark plug			
—size and thread.....	14 mm.	14 mm.	14 mm.
—torque required.....	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)	26 - 30 ft-lb (3,6 - 4,1 kg-m)
Timing gear cover screw or nut			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)
Valve lifter cover screw ¹			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	3 - 3½ ft-lb (0,42 - 0,49 kg-m)	2 - 2½ ft-lb (0,28 - 0,35 kg-m)	12 - 15 ft-lb (1,7 - 2,1 kg-m)
Valve tappet adjusting screw ²			
—size and thread.....	3/8" - 24	3/8" - 24	
—torque required.....	2 ft-lb MIN. (0,28 kg-m)	2½ ft-lb MIN. (0,35 kg-m)	
FRONT SUSPENSION AND STEERING			
Control arm threaded bushings			
—size and thread.....	15/16" - 11	15/16" - 11	15/16" - 11
—torque required.....	170 ft-lb MIN. (23,5 kg-m)	170 ft-lb MIN. (23,5 kg-m)	170 ft-lb MIN. (23,5 kg-m)
Control arm rubber bushing cap screws			
—size and thread.....	7/16" - 20	7/16" - 20	7/16" - 20
—torque required.....	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)
Power steering gear to frame bracket bolt nut			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Power steering unit to gear cap screws			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)

¹ To obtain proper seal, tighten these screws to required torque three successive times.

² These are self-locking screws and the specification is the minimum required drag. With less drag, the screw is considered to have doubtful locking.

	56G	56B and 56H	56J
Power steering unit housing cap screws			
—size and thread.....	5/16" - 18	5/16" - 18	5/16" - 18
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)	13 - 17 ft-lb (1,8 - 2,3 kg-m)
Power steering unit flange bolt to steering post flange bolt nut			
—size and thread.....	1/4" - 28	1/4" - 28	1/4" - 28
—torque required.....	12 - 15 ft-lb (1,7 - 2,1 kg-m)	12 - 15 ft-lb (1,7 - 2,1 kg-m)	12 - 15 ft-lb (1,7 - 2,1 kg-m)
Steering bell crank clamping bolt			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)
Steering bell crank bracket bolt nut			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)
Steering gear arm nut			
—size and thread.....	3/4" - 16	3/4" - 16	3/4" - 16
—torque required.....	90 - 150 ft-lb (12,4 - 20,7 kg-m)	90 - 150 ft-lb (12,4 - 20,7 kg-m)	90 - 150 ft-lb (12,4 - 20,7 kg-m)
Steering gear mounting bolt nut			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	35-40 ft-lb (4,8 - 5,5 kg-m)	35 - 40 ft-lb (4,8 - 5,5 kg-m)	35 - 40 ft-lb (4,8 - 5,5 kg-m)
Steering knuckle arm nut			
—size and thread.....	5/8" - 18	5/8" - 18	5/8" - 18
—torque required.....	80 - 85 ft-lb (11,0 - 11,7 kg-m)	80 - 85 ft-lb (11,0 - 11,7 kg-m)	80 - 85 ft-lb (11,0 - 11,7 kg-m)
Steering reach rod ball stud nut			
—size and thread.....	1/2" - 20	1/2" - 20	1/2" - 20
—torque required.....	50 - 55 ft-lb (6,9 - 7,6 kg-m)	50 - 55 ft-lb (6,9 - 7,6 kg-m)	50 - 55 ft-lb (6,9 - 7,6 kg-m)
Steering wheel nut			
—size and thread.....	13/16" - 20	13/16" - 20	13/16" - 20
—torque required.....	23 - 27 ft-lb (3,2 - 3,7 kg-m)	23 - 27 ft-lb (3,2 - 3,7 kg-m)	23 - 27 ft-lb (3,2 - 3,7 kg-m)
Tie rod ball stud nut			
—size and thread.....	1/2" - 20	1/2" - 20	1/2" - 20
—torque required.....	50 - 55 ft-lb (6,9 - 7,6 kg-m)	50 - 55 ft-lb (6,9 - 7,6 kg-m)	50 - 55 ft-lb (6,9 - 7,6 kg-m)
Upper control arm inner shaft to frame bolt nut			
—size and thread.....	1/2" - 20	1/2" - 20	1/2" - 20
—torque required.....	75 - 80 ft-lb (10,4 - 11,0 kg-m)	75 - 80 ft-lb (10,4 - 11,0 kg-m)	75 - 80 ft-lb (10,4 - 11,0 kg-m)
Upper control arm inner shaft bushing cap screw			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	32 - 37 ft-lb (4,4 - 5,1 kg-m)	32 - 37 ft-lb (4,4 - 5,1 kg-m)	32 - 37 ft-lb (4,4 - 5,1 kg-m)
Lower control arm inner shaft to frame bolt nut			
—size and thread.....	7/16" - 20	7/16" - 20	7/16" - 20
—torque required.....	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)
Lower control arm inner shaft bushing cap screw			
—size and thread.....	1/2" - 20	1/2" - 20	1/2" - 20
—torque required.....	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)	60 - 65 ft-lb (8,3 - 9,0 kg-m)

GASOLINE SYSTEM

Carburetor mounting stud nut			
—size and thread.....	3/8" - 24	3/8" - 24	5/16" - 24
—torque required.....	26 - 30 ft-lb (3,6 - 4,1 kg-m)	26 - 30 ft-lb (3,6 - 4,1 kg-m)	15 - 18 ft-lb (2,1 - 2,5 kg-m)
Fuel pump mounting screw			
—size and thread.....	5/16" - 18	5/16" - 18	3/8" - 16
—torque required.....	12 - 15 ft-lb (1,7 - 2,1 kg-m)	12 - 15 ft-lb (1,7 - 2,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)

PROPELLER SHAFTS AND UNIVERSAL JOINTS

Propeller shaft support screw			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)
Rear axle flange nut			
—size and thread.....	3/4" - 16	3/4" - 16	3/4" - 16
—torque required.....	140 - 180 ft-lb (19,3 - 24,8 kg-m)	140 - 180 ft-lb (19,3 - 24,8 kg-m)	140 - 180 ft-lb (19,3 - 24,8 kg-m)
Transmission flange nut			
—size and thread.....	3/4" - 16	3/4" - 16	3/4" - 16
—torque required.....	140 - 180 ft-lb (19,3 - 24,8 kg-m)	140 - 180 ft-lb (19,3 - 24,8 kg-m)	140 - 180 ft-lb (19,3 - 24,8 kg-m)
Universal joint flange U-bolt nuts			
—size and thread.....	5/16" - 24	5/16" - 24	5/16" - 24
—torque required.....	14 - 17 ft-lb (1,9 - 2,3 kg-m)	14 - 17 ft-lb (1,9 - 2,3 kg-m)	14 - 17 ft-lb (1,9 - 2,3 kg-m)

	56G	56B and 56H	56J
REAR AXLE			
Bevel drive gear-to-case screw			
—size and thread.....	3/8" - 24	3/8" - 24	3/8" - 24
—torque required.....	40 - 50 ft-lb (5,5 - 6,9 kg-m)	40 - 50 ft-lb (5,5 - 6,9 kg-m)	40 - 50 ft-lb (5,5 - 6,9 kg-m)
Differential bearing cap screw			
—size and thread.....	1/2" - 13	1/2" - 13	1/2" - 13
—torque required.....	70 - 80 ft-lb (9,7 - 11,0 kg-m)	70 - 80 ft-lb (9,7 - 11,0 kg-m)	70 - 80 ft-lb (9,7 - 11,0 kg-m)
Housing cover screw			
—size and thread.....	5/16" - 18	3/8" - 16	3/8" - 16
—torque required.....	13 - 17 ft-lb (1,8 - 2,3 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)	25 - 30 ft-lb (3,5 - 4,1 kg-m)
Shaft-to-hub nut			
—size and thread.....	1" - 14	1" - 14	1" - 14
—torque required.....	170 - 240 ft-lb (23,5 - 33,1 kg-m)	170 - 240 ft-lb (23,5 - 33,1 kg-m)	170 - 240 ft-lb (23,5 - 33,1 kg-m)
SPRINGS			
Rear spring front bolt			
—size and thread.....	7/16" - 20	7/16" - 20	7/16" - 20
—torque required.....	50 ft-lb (6,9 kg-m)	50 ft-lb (6,9 kg-m)	50 ft-lb (6,9 kg-m)
Rear spring shackle bolt			
—size and thread.....	7/16" - 20	7/16" - 20	7/16" - 20
—torque required.....	50 ft-lb (6,9 kg-m)	50 ft-lb (6,9 kg-m)	50 ft-lb (6,9 kg-m)
Rear spring U-bolt nut			
—size and thread.....	3/8" - 24	7/16" - 14	7/16" - 14
—torque required.....	47 - 50 ft-lb (6,5 - 6,9 kg-m)	63 - 68 ft-lb (8,7 - 9,4 kg-m)	63 - 68 ft-lb (8,7 - 9,4 kg-m)
TRANSMISSION			
Transmission case-to-clutch housing screw			
—size and thread.....	7/16" - 14	9/16" - 12	7/16" - 14
—torque required.....	60 - 70 ft-lb (8,3 - 9,7 kg-m)	70 - 80 ft-lb (9,7 - 11,0 kg-m)	55 - 60 ft-lb (7,6 - 8,3 kg-m)
FLIGHTOMATIC DRIVE			
Case assembly gauge hole plug			
—size and thread.....	1/8" - 27 Pipe	1/8" - 27 Pipe	
—torque required.....	7 - 15 ft-lb (1,0 - 2,1 kg-m)	7 - 15 ft-lb (1,0 - 2,1 kg-m)	
Center support-to-transmission case bolts			
—size and thread.....	3/8" - 16	3/8" - 16	
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	
Companion flange nut			
—size and thread.....	3/4" - 16	3/4" - 16	
—torque required.....	90 - 120 ft-lb (12,4 - 16,5 kg-m)	90 - 120 ft-lb (12,4 - 16,5 kg-m)	
Control valve body screws			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	20 - 30 in-lb (0,23 - 0,34 kg-m)	20 - 30 in-lb (0,23 - 0,34 kg-m)	
Control valve body-to-transmission case bolts			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	8 - 10 ft-lb (1,1 - 1,4 kg-m)	8 - 10 ft-lb (1,1 - 1,4 kg-m)	
Converter drain plugs			
—size and thread.....	1/8" - 27 Pipe	1/8" - 27 Pipe	
—torque required.....	7 - 10 ft-lb (1,0 - 1,4 kg-m)	7 - 10 ft-lb (1,0 - 1,4 kg-m)	
Converter drive plate-to-converter lock screw			
—size and thread.....	3/8" - 24	3/8" - 24	
—torque required.....	23 - 28 ft-lb (3,2 - 3,9 kg-m)	23 - 28 ft-lb (3,2 - 3,9 kg-m)	
Converter housing-to-engine attaching bolts			
—size and thread.....	3/8" - 16	3/8" - 16	
—torque required.....	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)	
Transmission-to-converter housing case bolts			
—size and thread.....	7/16" - 14	7/16" - 14	
—torque required.....	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)	
Crossmember-to-frame attaching bolts			
—size and thread.....	3/8" - 24	3/8" - 24	
—torque required.....	25 - 32 ft-lb (3,5 - 4,4 kg-m)	25 - 32 ft-lb (3,5 - 4,4 kg-m)	
Detent lever attaching nut (inner)			
—size and thread.....	9/16" - 24	9/16" - 24	
—torque required.....	35 - 40 ft-lb (4,8 - 5,5 kg-m)	35 - 40 ft-lb (4,8 - 5,5 kg-m)	

	56G	56B and 56H	56J
Engine rear support-to-crossmember attaching bolts			
—size and thread.....	7/16" - 20	7/16" - 20	
—torque required.....	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)	
Extension assembly-to-transmission case bolts			
—size and thread.....	3/8" - 16	3/8" - 16	
—torque required.....	28 - 33 ft-lb (3,9 - 4,6 kg-m)	28 - 33 ft-lb (3,9 - 4,6 kg-m)	
Front band adjusting screw lock nut			
—size and thread.....	3/8" - 16	3/8" - 16	
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	
Front pump cover attaching screws			
—size and thread.....	No. 10 - 24	No. 10 - 24	
—torque required.....	25 - 35 in-lb (0,29 - 0,4 kg-m)	25 - 35 in-lb (0,29 - 0,4 kg-m)	
Front pump-to-transmission case bolts			
—size and thread.....	5/16" - 18	5/16" - 18	
—torque required.....	17 - 22 ft-lb (2,3 - 3,0 kg-m)	17 - 22 ft-lb (2,3 - 3,0 kg-m)	
Front servo-to-transmission case bolts			
—size and thread.....	3/8" - 16	3/8" - 16	
—torque required.....	30 - 35 ft-lb (4,1 - 4,8 kg-m)	30 - 35 ft-lb (4,1 - 4,8 kg-m)	
Governor inspection cover attaching screws			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	50 - 60 in-lb (0,58 - 0,69 kg-m)	50 - 60 in-lb (0,58 - 0,69 kg-m)	
Governor valve body-to-counterweight screws			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	50 - 60 in-lb (0,58 - 0,69 kg-m)	50 - 60 in-lb (0,58 - 0,69 kg-m)	
Governor valve body cover screws			
—size and thread.....	No. 10 - 24	No. 10 - 24	
—torque required.....	20 - 30 in-lb (0,23 - 0,34 kg-m)	20 - 30 in-lb (0,23 - 0,34 kg-m)	
Inner throttle lever attaching nut			
—size and thread.....	5/16" - 24	5/16" - 24	
—torque required.....	17 - 20 ft-lb (2,3 - 2,8 kg-m)	17 - 20 ft-lb (2,3 - 2,8 kg-m)	
Oil distributor-to-oil distributor sleeve bolts			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	8 - 10 ft-lb (1,1 - 1,4 kg-m)	8 - 10 ft-lb (1,1 - 1,4 kg-m)	
Oil pan drain plug			
—size and thread.....	5/8" - 18	5/8" - 18	
—torque required.....	20 - 25 ft-lb (2,8 - 3,5 kg-m)	20 - 25 ft-lb (2,8 - 3,5 kg-m)	
Oil pan-to-transmission case bolts			
—size and thread.....	5/16" - 18	5/16" - 18	
—torque required.....	10-13 ft-lb (1,4 - 1,8 kg-m)	10 - 13 ft-lb (1,4 - 1,8 kg-m)	
Pressure regulator assembly-to-transmission case bolts			
—size and thread.....	5/16" - 18	5/16" - 18	
—torque required.....	17 - 22 ft-lb (2,3 - 3,0 kg-m)	17 - 22 ft-lb (2,3 - 3,0 kg-m)	
Pressure regulator cover attaching screws			
—size and thread.....	No. 10 - 24	No. 10 - 24	
—torque required.....	20 - 30 in-lb (0,23 - 0,34 kg-m)	20 - 30 in-lb (0,23 - 0,34 kg-m)	
Pressure regulator studs and nuts			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	40 - 50 in-lb (0,46 - 0,58 kg-m)	40 - 50 in-lb (0,46 - 0,58 kg-m)	
Rear band adjusting screw lock nut			
—size and thread.....	1/2" - 20	1/2" - 20	
—torque required.....	35 - 40 ft-lb (3,0 - 5,5 kg-m)	35 - 40 ft-lb (3,0 - 5,5 kg-m)	
Rear pump cover attaching screws			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	50 - 60 in-lb (0,58 - 0,69 kg-m)	50 - 60 in-lb (0,58 - 0,69 kg-m)	
Rear pump cover attaching screws			
—size and thread.....	No. 10-24	No. 10 - 24	
—torque required.....	20 - 30 in-lb (0,23 - 0,34 kg-m)	20 - 30 in-lb (0,23 - 0,34 kg-m)	
Rear servo-to-transmission case bolts			
—size and thread.....	7/16" - 14	7/16" - 14	
—torque required.....	40 - 45 ft-lb (5,5 - 6,0 kg-m)	40 - 45 ft-lb (5,5 - 6,0 kg-m)	
Transmission vent assembly			
—size and thread.....	1/8" - 27 Pipe	1/8" - 27 Pipe	
—torque required.....	7 - 10 ft-lb (1,0 - 1,4 kg-m)	7 - 10 ft-lb (1,0 - 1,4 kg-m)	

	56G	56B and 56H	56J
Upper valve body-to-lower valve body bolts			
—size and thread.....	1/4" - 20	1/4" - 20	
—torque required.....	4 - 6 ft-lb (0,6 - 0,8 kg-m)	4 - 6 ft-lb (0,6 - 0,8 kg-m)	
ULTRAMATIC DRIVE			
Transmission assembly screw			
—size and thread.....			3/8" - 16
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission bell housing assembly screw			
—size and thread.....			7/16" - 14
—torque required.....			55 - 60 ft-lb (7,6 - 8,3 kg-m)
Transmission bell housing assembly plug			
—size and thread.....			3/8" - 18 Pipe
—torque required.....			10 - 12 ft-lb (1,4 - 1,7 kg-m)
Transmission bell housing assembly plug			
—size and thread.....			1/8" - 27 Pipe
—torque required.....			8 - 10 ft-lb (1,1 - 1,4 kg-m)
Transmission brake band adjusting screw			
—size and thread.....			5/8" - 18*
Transmission brake band adjusting screw jam nut			
—size and thread.....			5/8" - 18
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission brake piston cover screw			
—size and thread.....			No. 10 - 24
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission brake piston cover screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission brake piston cover screw			
—size and thread.....			1/8" - 27 Pipe
—torque required.....			8 - 10 ft-lb (1,1 - 1,4 kg-m)
Transmission control assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			9 ft-lb (1,3 kg-m)
Transmission control valve starter safety switch			
—size and thread.....			3/4" - 16
—torque required.....			50 ft-lb (6,9 kg-m)
Transmission control converter relief valve retainer screw			
—size and thread.....			5/16" - 18
—torque required.....			9 ft-lb (1,3 kg-m)
Transmission control oil pump selector valve cover screw			
—size and thread.....			No. 10 - 24
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control direct drive valve cover screw			
—size and thread.....			No. 10-24
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control throttle valve spring seat screw			
—size and thread.....			No. 10 - 24
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control timing valve cover screw			
—size and thread.....			No. 10 - 24
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control valve body (upper to lower) screw			
—size and thread.....			1/4" - 20x1-3/8
—torque required.....			5 ft-lb (0,7 kg-m)
Transmission control valve body (upper to lower) screw			
—size and thread.....			1/4" - 20 x 1 1/8
—torque required.....			5 ft-lb (0,7 kg-m)
Transmission control valve body (upper to lower) screw			
—size and thread.....			1/4" - 20
—torque required.....			5 ft-lb (0,7 kg-m)
Transmission control valve body (upper to lower) screw			
—size and thread.....			1/4" - 20 x 1 3/4
—torque required.....			5 ft-lb (0,7 kg-m)

*Tighten with a torque load of 20 ft-lbs.
Back off 1.75 turns. Tighten jam nut.

	56G	56B and 56H	56J
Transmission control valve body (upper to case) screw			
—size and thread.....			5/16" - 18
—torque required.....			9 ft-lb (1,3 kg-m)
Transmission control valve body plug			
—size and thread.....			3/8" - 18 Pipe
—torque required.....			10 - 12 ft-lb (1,4 - 1,7 kg-m)
Transmission control valve body separator screw			
—size and thread.....			1/4" - 20
—torque required.....			5 ft-lb (0,7 kg-m)
Transmission control valve detent lever set screw nut			
—size and thread.....			5/16" - 24
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission control valve lever (inner) set screw nut			
—size and thread.....			5/16" - 24
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission control valve link screw			
—size and thread.....			No. 10 - 32
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control valve link nut			
—size and thread.....			No. 10 - 32
—torque required.....			20 - 30 in-lb (0,23 - 0,34 kg-m)
Transmission control valve starter safety switch terminal screw			
—size and thread.....			No. 8 - 32
—torque required.....			15 - 20 in-lb (0,16 - 0,23 kg-m)
Converter clutch housing screw			
—size and thread.....			3/8" - 16
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Converter oil drain plug			
—size and thread.....			1/8" - 27 Pipe
—torque required.....			8 - 10 ft-lb (1,1 - 1,4 kg-m)
Converter outlet valve assembly			
—size and thread.....			3/4" - 16
—torque required.....			50 ft-lb (6,9 kg-m)
Converter pump screw			
—size and thread.....			5/16" - 18
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Converter pump shaft screw			
—size and thread.....			5/16" - 24
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Converter reactor shaft screw			
—size and thread.....			5/16" - 24
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Converter (first) turbine screw			
—size and thread.....			5/16" - 24
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Converter (second) turbine screw			
—size and thread.....			1/4" - 20
—torque required.....			12 - 15 ft-lb (1,7 - 2,1 kg-m)
Transmission front oil pump assembly screw			
—size and thread.....			1/4" - 28
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)
Transmission governor assembly screw			
—size and thread.....			1/4" - 28
—torque required.....			6 ft-lb (0,8 kg-m)
Transmission governor adaptor screw			
—size and thread.....			1/4" - 20
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)
Transmission governor cover screw			
—size and thread.....			1/4" - 20
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)

	56G	56B and 56H	56J
Transmission governor pressure take-off plug			
—size and thread.....			1/8" - 27 Pipe
—torque required.....			8 - 10 ft-lb (1,1 - 1,4 kg-m)
Transmission oil cooler hose assembly			
—size and thread.....			3/8" - 18
—torque required.....			30 ft-lb (4,1 kg-m)
Transmission oil cooler tube assembly clip bolt			
—size and thread.....			3/8" - 24
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission oil cooler tube assembly clip nut			
—size and thread.....			3/8" - 24
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission oil cooler tube assembly clip screw			
—size and thread.....			3/8" - 16
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission oil cooler assembly elbow (pipe thread)			
—size and thread.....			1/4" - 18
—torque required.....			20 - 25 ft-lb (2,8 - 3,5 kg-m)
Transmission oil filler plug (breather type)			
—size and thread.....			3/4" - 14 Pipe
—torque required.....			18 - 20 ft-lb (2,5 - 2,8 kg-m)
Transmission oil cooler tube assembly nut			
—size and thread.....			5/8" - 18
—torque required.....			20 - 25 ft-lb (2,8 - 3,5 kg-m)
Transmission oil pan screw			
—size and thread.....			5/16" - 18
—torque required.....			10 - 12 ft-lb (1,4 - 1,7 kg-m)
Transmission oil pan drain plug			
—size and thread.....			5/8" - 18
—torque required.....			25 - 30 ft-lb (3,5 - 4,1 kg-m)
Transmission oil strainer assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission planetary cage screw			
—size and thread.....			5/16" - 24
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission reactor clutch housing assembly lock nut			
—size and thread.....			1/4" - 28
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)
Transmission reactor, clutch housing assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission rear housing assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission rear oil pump body assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission rear oil pump body assembly screw			
—size and thread.....			5/16" - 18
—torque required.....			15 - 18 ft-lb (2,1 - 2,5 kg-m)
Transmission rear oil pump body cover plate retaining screw			
—size and thread.....			1/4" - 20
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)
Transmission speedometer pinion adaptor screw			
—size and thread.....			1/4" - 20
—torque required.....			8 - 9 ft-lb (1,1 - 1,3 kg-m)
Transmission universal joint flange nut			
—size and thread.....			3/4" - 16
—torque required.....			200 - 225 ft-lb (27,66 - 31,11 kg-m)

WHEELS

Wheel-to-hub stud nut			
—size and thread.....	1/2" - 20	1/2" - 20	1/2" - 20
—torque required.....	75 - 83 ft-lb (10,4 - 11,5 kg-m)	75 - 83 ft-lb (10,4 - 11,5 kg-m)	75 - 83 ft-lb (10,4 - 11,5 kg-m)

DECIMAL EQUIVALENTS

	INCHES	MILLIMETERS		INCHES	MILLIMETERS		
	$\frac{1}{64}$.015625	0,397		$\frac{33}{64}$.515625	13,097
	$\frac{1}{32}$.03125	0,794		$\frac{17}{32}$.53125	13,494
	$\frac{3}{64}$.046875	1,191		$\frac{35}{64}$.546875	13,891
	$\frac{1}{16}$.0625	1,588		$\frac{9}{16}$.5625	14,288
	$\frac{5}{64}$.078125	1,984		$\frac{27}{64}$.578125	14,684
	$\frac{3}{32}$.09375	2,381		$\frac{19}{32}$.59375	15,081
	$\frac{7}{64}$.109375	2,778		$\frac{39}{64}$.609375	15,478
	$\frac{1}{8}$.125	3,175		$\frac{5}{8}$.625	15,875
	$\frac{9}{64}$.140625	3,572		$\frac{41}{64}$.640625	16,272
	$\frac{5}{32}$.15625	3,969		$\frac{21}{32}$.65625	16,669
	$\frac{11}{64}$.171875	4,366		$\frac{43}{64}$.671875	17,066
	$\frac{3}{16}$.1875	4,763		$\frac{11}{16}$.6875	17,463
	$\frac{13}{64}$.203125	5,159		$\frac{45}{64}$.703125	17,859
	$\frac{7}{32}$.21875	5,556		$\frac{23}{32}$.71875	18,256
	$\frac{15}{64}$.234375	5,953		$\frac{47}{64}$.734375	18,653
	$\frac{1}{4}$.25	6,350		$\frac{3}{4}$.75	19,050
	$\frac{17}{64}$.265625	6,747		$\frac{49}{64}$.765625	19,447
	$\frac{9}{32}$.28125	7,144		$\frac{25}{32}$.78125	19,844
	$\frac{19}{64}$.296875	7,541		$\frac{51}{64}$.796875	20,241
	$\frac{5}{16}$.3125	7,938		$\frac{13}{16}$.8125	20,638
	$\frac{21}{64}$.328125	8,334		$\frac{53}{64}$.828125	21,034
	$\frac{11}{32}$.34375	8,731		$\frac{27}{32}$.84375	21,431
	$\frac{23}{64}$.359375	9,128		$\frac{55}{64}$.859375	21,828
	$\frac{3}{8}$.375	9,525		$\frac{7}{8}$.875	22,225
	$\frac{25}{64}$.390625	9,922		$\frac{57}{64}$.890625	22,622
	$\frac{13}{32}$.40625	10,319		$\frac{29}{32}$.90625	23,019
	$\frac{27}{64}$.421875	10,716		$\frac{59}{64}$.921875	23,416
	$\frac{7}{16}$.4375	11,113		$\frac{15}{16}$.9375	23,813
	$\frac{29}{64}$.453125	11,509		$\frac{61}{64}$.953125	24,209
	$\frac{15}{32}$.46875	11,906		$\frac{31}{32}$.96875	24,606
	$\frac{31}{64}$.484375	12,303		$\frac{63}{64}$.984375	25,003
	$\frac{1}{2}$.5	12,700		1	1	25,400



To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, design or prices at any time without notice and without incurring obligation. Information and illustrations contained herein are from data available at the time this manual was compiled and published.

